










Backlight Control

-  (Fn) + (Ins)
Switch Side LED Backlight Mode
-  (Fn) + (End)
Switch Backlight Color
-  (Fn) + (Home)
Switch Backlight Mode
-  (Fn) + (↑)
Add Backlight brightness
-  (Fn) + (↓)
Decrease Backlight brightness
-  (Fn) + (←)
Decrease backlight speed
-  (Fn) + (→)
Add Backlight speed







In Windows System

(Fn) + (A) : switch to Win system

- F1 (Fn) + (1)
- F2 (Fn) + (2)
- F3 (Fn) + (3)
- F4 (Fn) + (4)
- F5 (Fn) + (5)
- F6 (Fn) + (6)
- F7 (Fn) + (7)
- F8 (Fn) + (8)
- F9 (Fn) + (9)
- F10 (Fn) + (0)
- F11 (Fn) + (- _)
- F12 (Fn) + (= +)

In Mac System

(Fn) + (s) : switch to Mac system

-  (Fn) + (7)
Previous Track
-  (Fn) + (8)
Play/Pause
-  (Fn) + (9)
Next Track
-  (Fn) + (10)
Mute
-  (Fn) + (11)
Volume Down
-  (Fn) + (12)
Volume Up

WIRED/WIRELESS CONNECTION

ON OFF

Switch Wired/Wireless Mode



Step 1: Click for connected wireless devices switching

Step 2: Long-press for wireless pairing



HOW TO PAIR?
SCAN IT!!

Have an issue with one of our RK products?

Feel free to contact us with any product issues or questions. We will reply as quickly as possible to ensure all your needs are handled.

Please contact the seller or reach out to support@rkgaming.com.



Purchase RK worry free with our 12 months warranty.

Our warranty includes replacements, and full refund for defective products (except man-made damages).

We hope you enjoy our products!

WIRELESS TIMELESS ENDLESS